


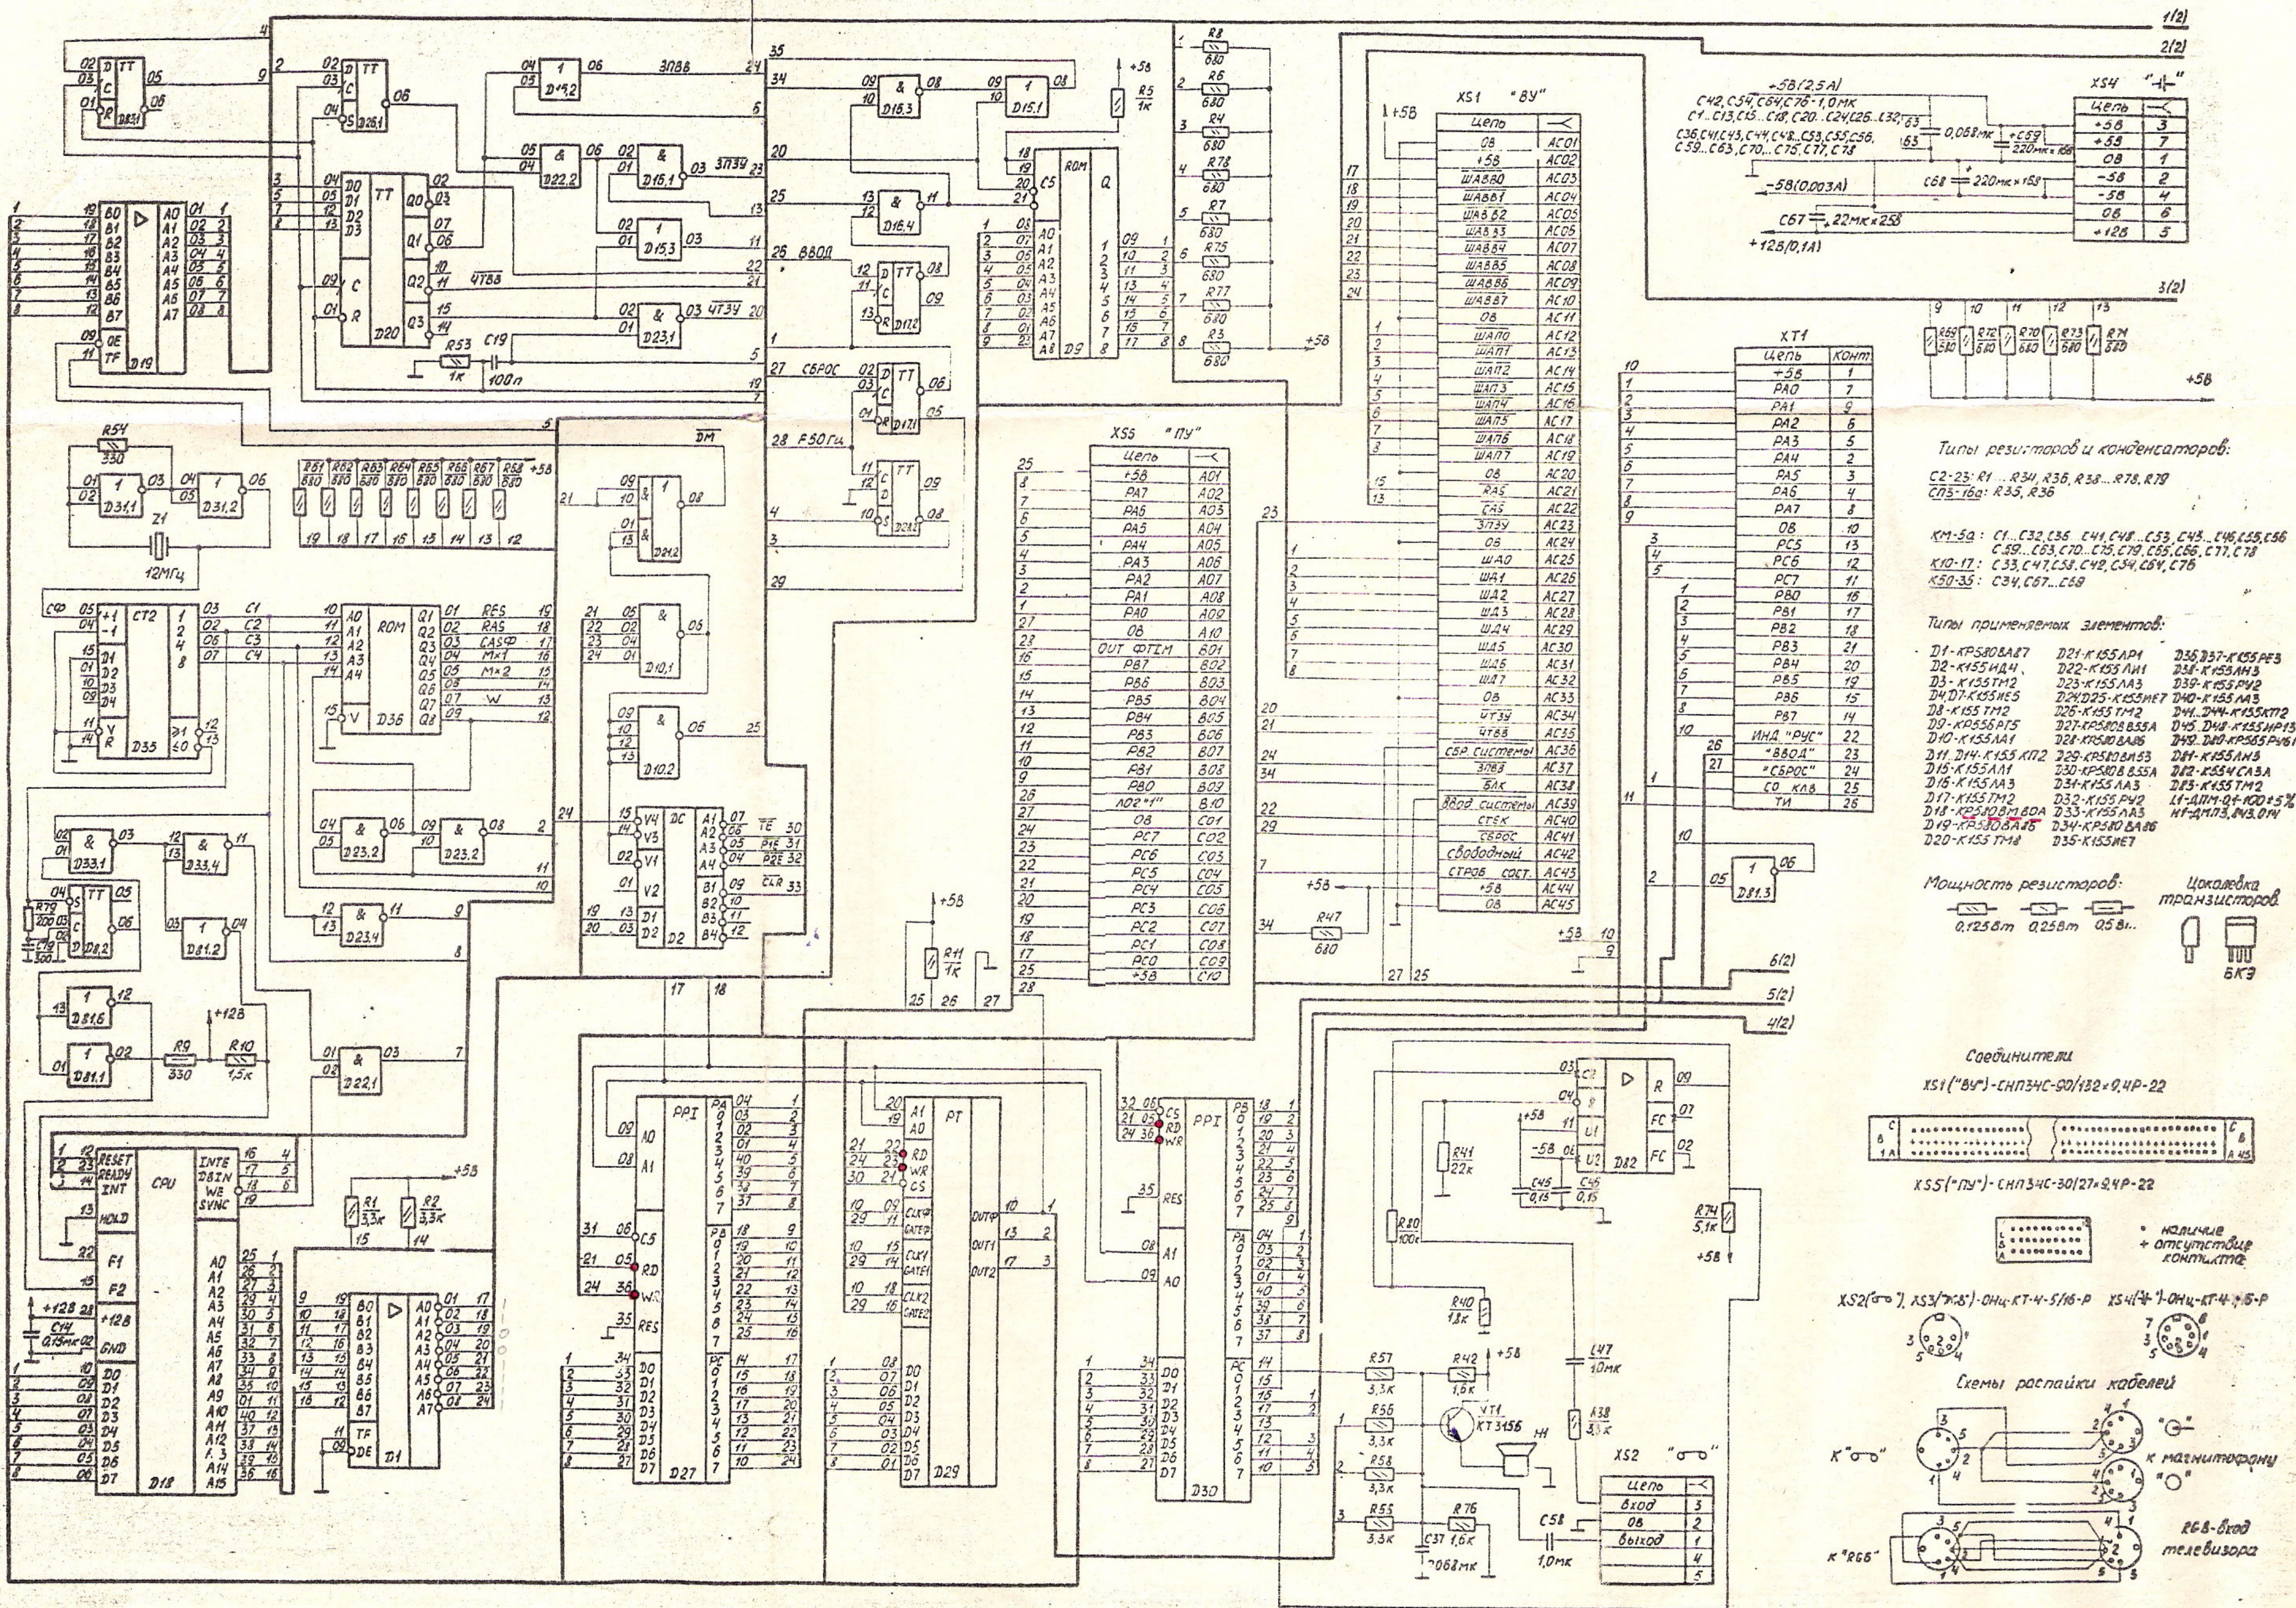

Типы резисторов и конденсаторов:

C2-23: R1...R34, R36, R38...R78, R79
C75-16a: R35, R36

КМ-5a: C1...C32, C36...C41, C48...C53, C43...C46, C55, C56
C59...C63, C70...C75, C79, C85, C86, C77, C78
К10-17: C33, C47, C58, C42, C54, C64, C76
К50-35: C34, C67...C69


Типы применяемых элементов:

D1-KP580BA87 D2-K155A4 D3-K155TM2 D4-D7-K155HE5 D8-K155TM2 D9-KP556P15 D10-K155AA1 D11-D14-K155K172 D15-K155AA1 D16-K155AA3 D17-K155TM2 D18-KP580BA87 D19-KP580BA87 D20-K155TM2 D21-K155AP1 D22-K155AA1 D23-K155AA3 D24-D25-K155HE7 D26-K155TM2 D27-KP580BA87 D28-KP580BA87 D29-KP580BA87 D30-KP580BA87 D31-K155AA3 D32-K155P42 D33-K155AA3 D34-K155AA3 D35-K155HE7 D36-D37-K155AF3 D38-K155AA3 D39-K155P42 D40-K155AA3 D41-D44-K155K172 D45-D48-K155MP13 D49-D50-KP580BA87 D51-K155AA3 D52-K155P42 D53-K155AA3 D54-K155P42 D55-K155AA3 D56-K155P42 D57-K155AA3 D58-K155P42 D59-K155AA3 D60-K155P42 D61-K155AA3 D62-K155P42 D63-K155AA3 D64-K155P42 D65-K155AA3 D66-K155P42 D67-K155AA3 D68-K155P42 D69-K155AA3 D70-K155P42 D71-K155AA3 D72-K155P42 D73-K155AA3 D74-K155P42 D75-K155AA3 D76-K155P42 D77-K155AA3 D78-K155P42 D79-K155AA3 D80-K155P42 D81-K155AA3 D82-K155P42 D83-K155AA3 D84-K155P42 D85-K155AA3 D86-K155P42 D87-K155AA3 D88-K155P42 D89-K155AA3 D90-K155P42 D91-K155AA3 D92-K155P42 D93-K155AA3 D94-K155P42 D95-K155AA3 D96-K155P42 D97-K155AA3 D98-K155P42 D99-K155AA3 D100-K155P42

Мощность резисторов:


0,125Вт 0,25Вт 0,5Вт...

Цоколевка транзисторов

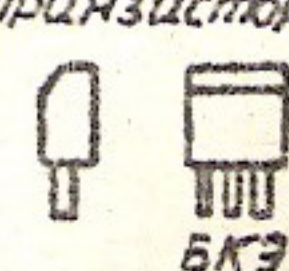


Соединители

X1("BY")-СНПЗНС-90/432+9,4P-22

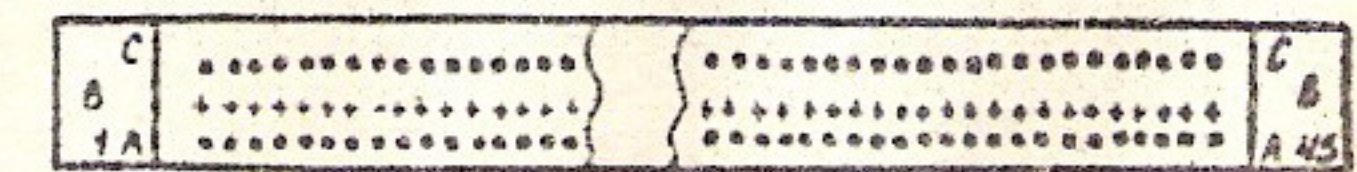



X55("PY")-СНПЗНС-30/27+9,4P-22

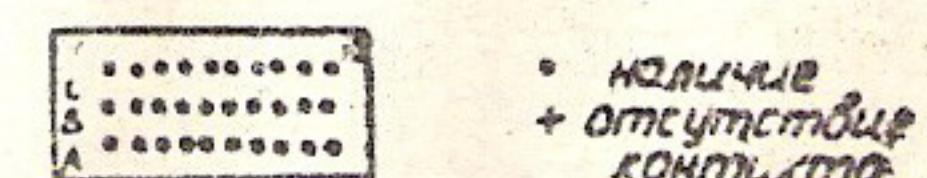

X52("G"), X53("M"), X54("H"), X55("K"), X56("L"), X57("N"), X58("O"), X59("P"), X60("Q"), X61("R"), X62("S"), X63("T"), X64("U"), X65("V"), X66("W"), X67("X"), X68("Y"), X69("Z"), X70("AA"), X71("AB"), X72("AC"), X73("AD"), X74("AE"), X75("AF"), X76("AG"), X77("AH"), X78("AI"), X79("AJ"), X80("AK"), X81("AL"), X82("AM"), X83("AN"), X84("AO"), X85("AP"), X86("AQ"), X87("AR"), X88("AS"), X89("AT"), X90("AU"), X91("AV"), X92("AW"), X93("AX"), X94("AY"), X95("AZ"), X96("BA"), X97("BB"), X98("BC"), X99("BD"), X100("BE")

Схемы распиновки кабелей

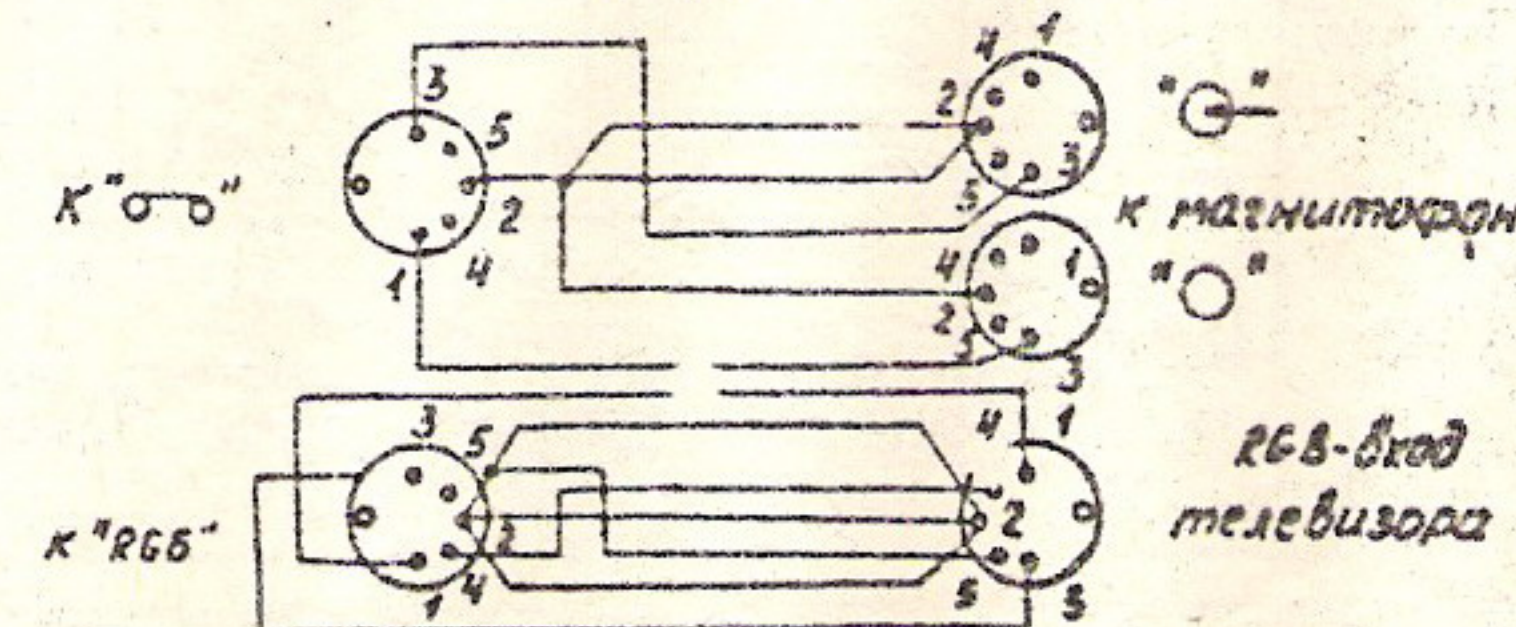

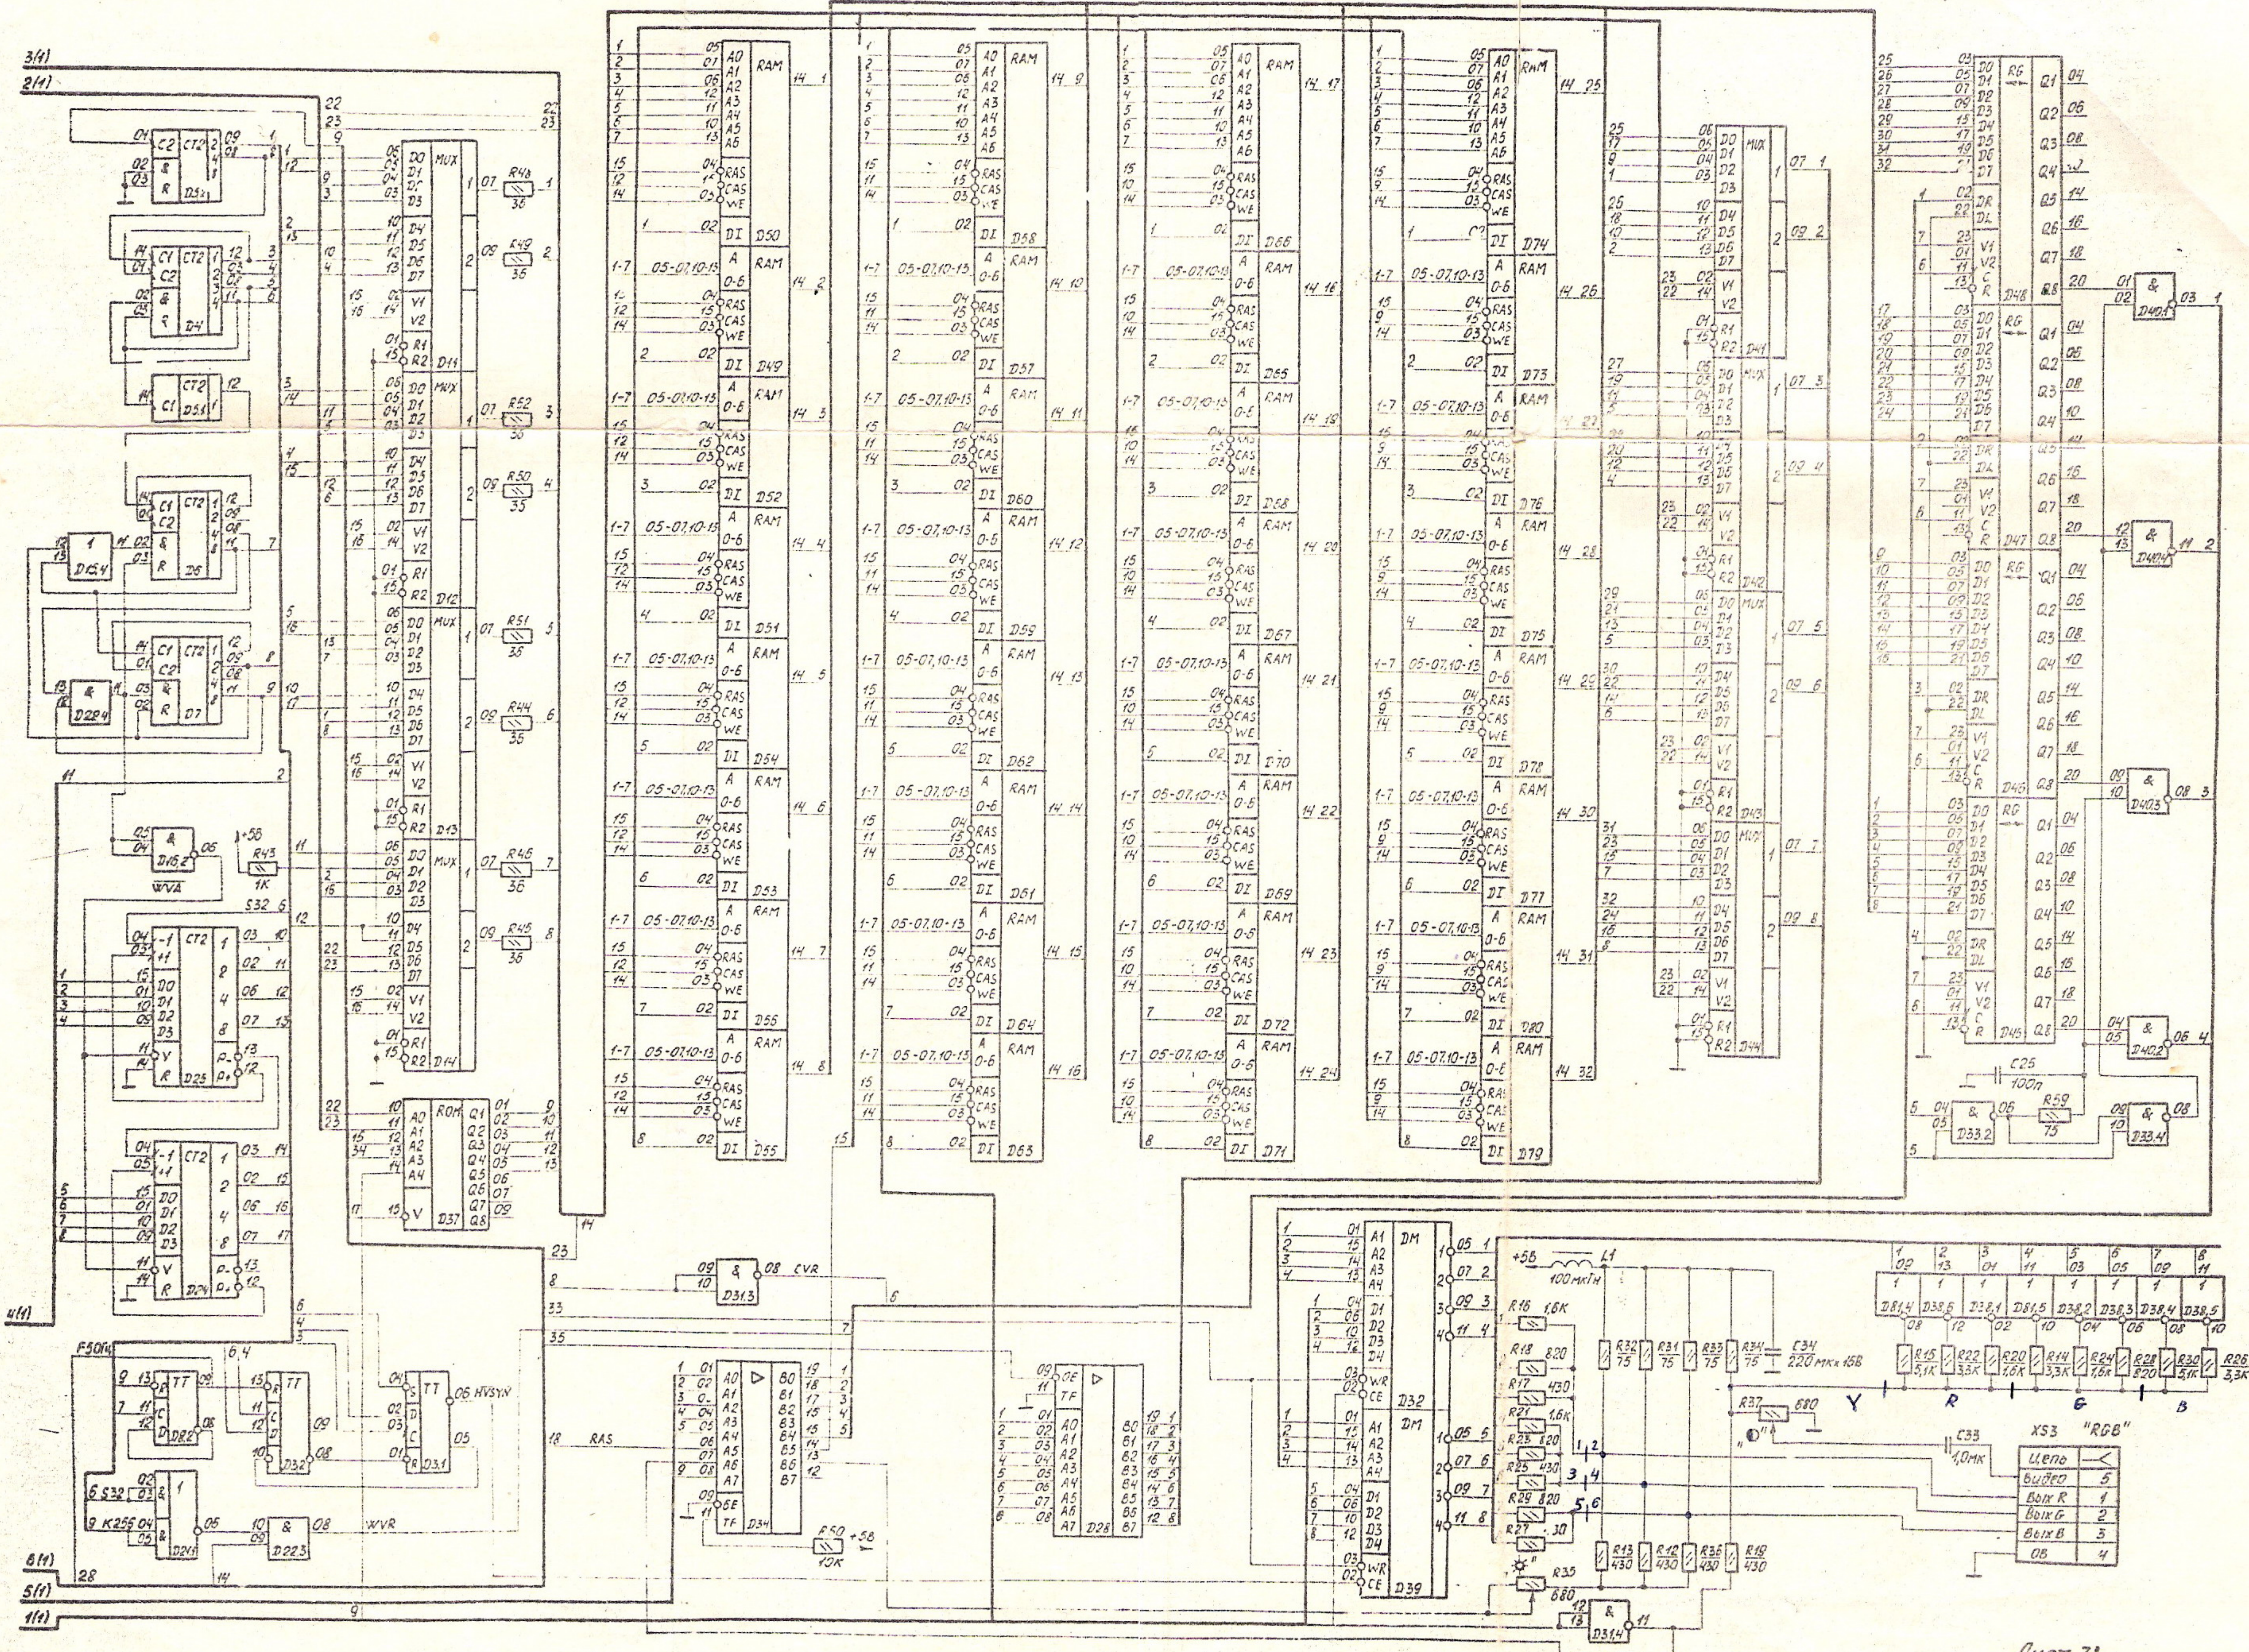


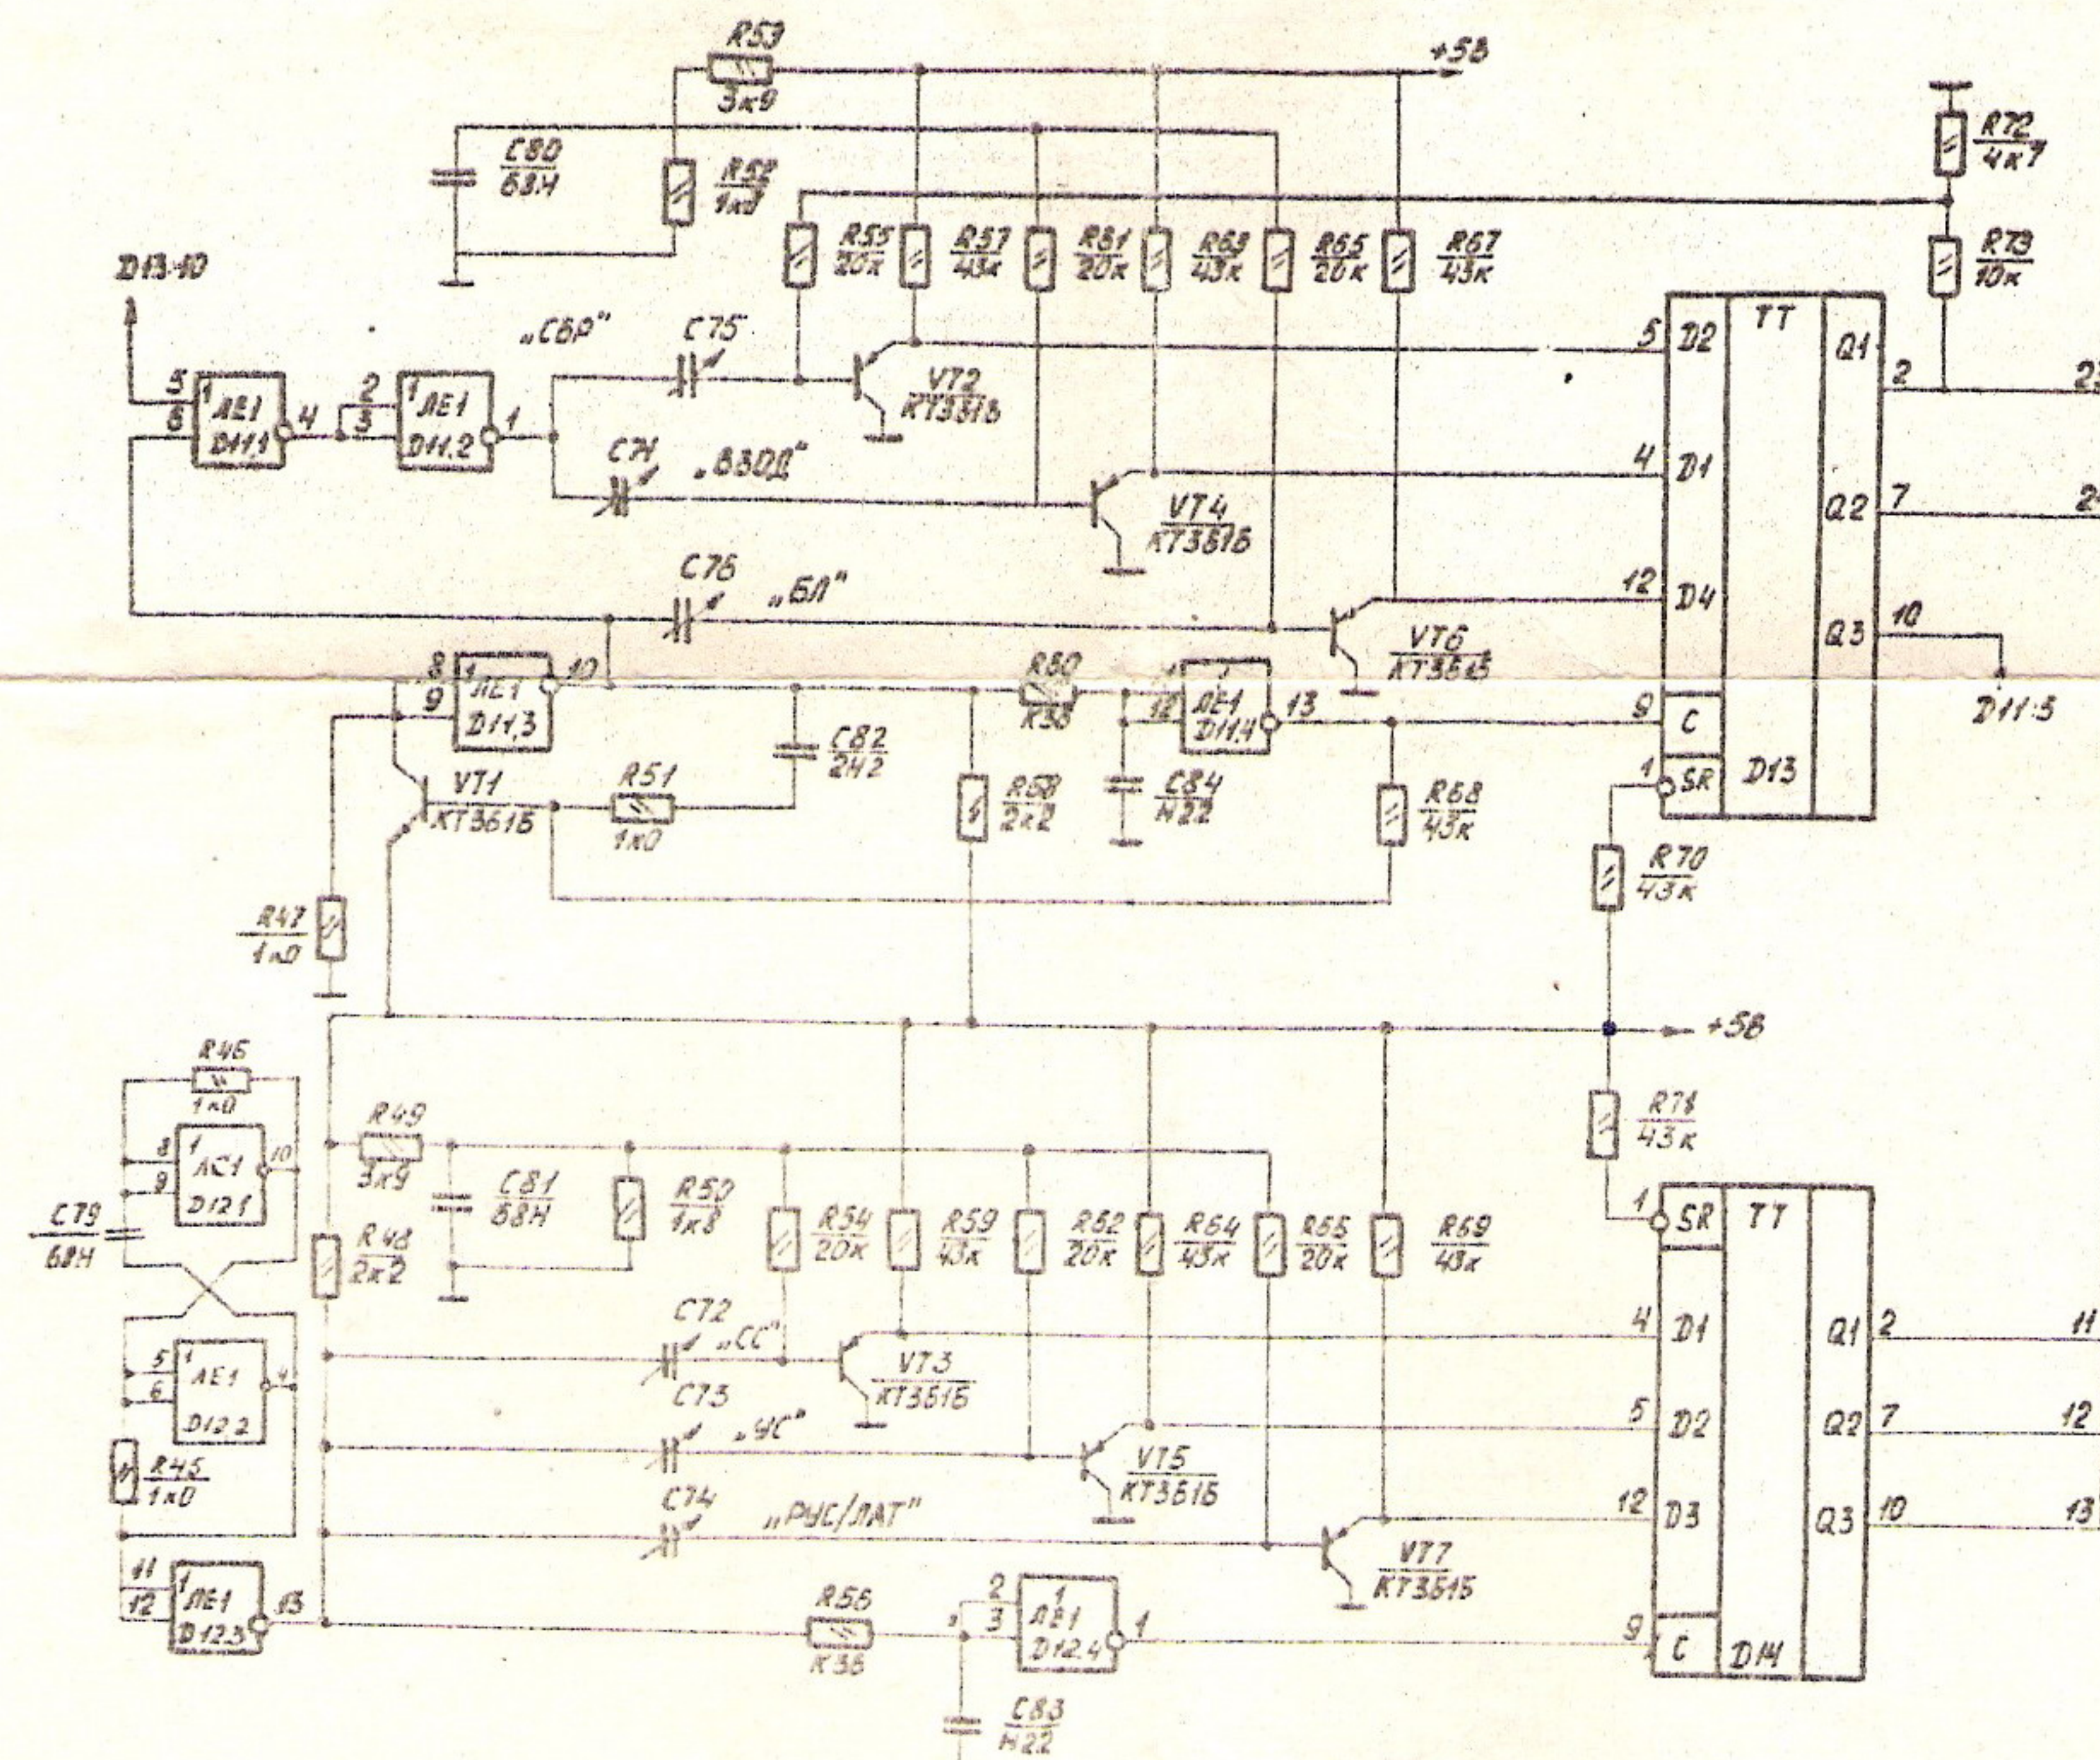


СХЕМА ЭЛЕКТРИЧЕСКАЯ ПРИНЦИПИАЛЬНАЯ БЛОКА ПИТАНИЯ

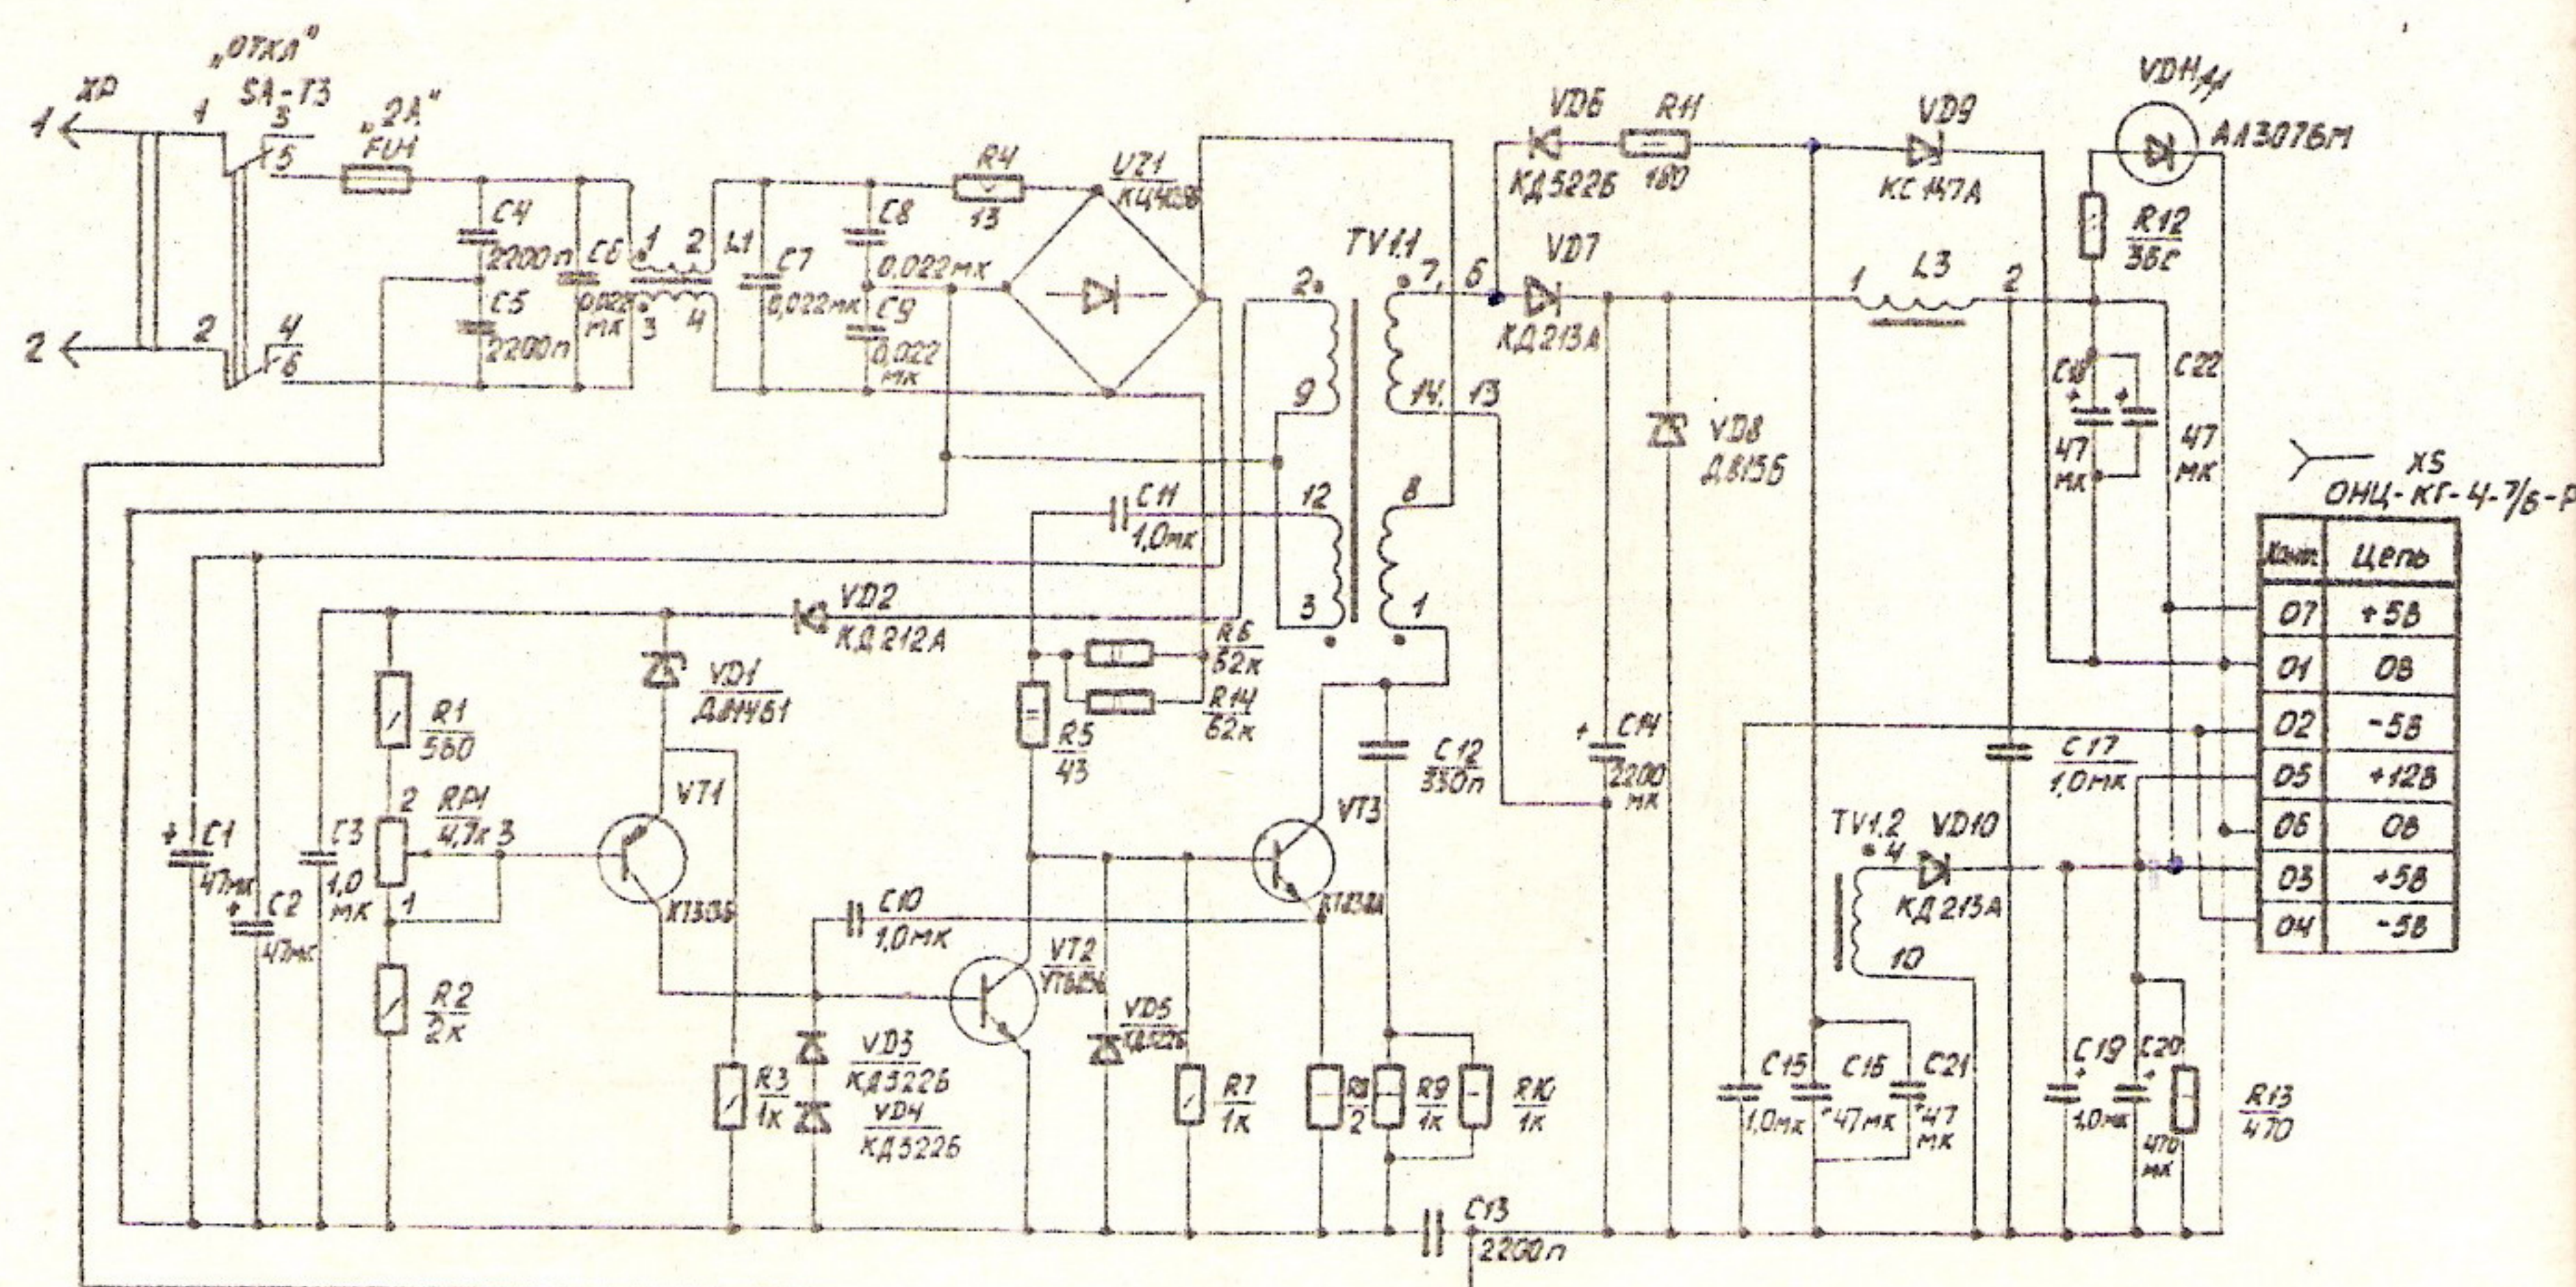

Типы резисторов и конденсаторов

C2-23 : R1...R73

K50-35: C1

KM-52: C2...C6, C77...C84

MU7: C7...C76

Типы применяемых элементов

D1, D2 - КД50АФ1

D11, D12 - КД50АФ1

Цоколевка транзисторов

D3...D10 - КР400Б ВМ

D13, D14 - К555ТМ8

КТ381Б


VH1, VH2 - АЛ307БМ

VD1...VD8 - КД522Б

V73...V77 - КТ381Б



Расположение клавиш БПЗВМ ВЕКТОР-06Ц

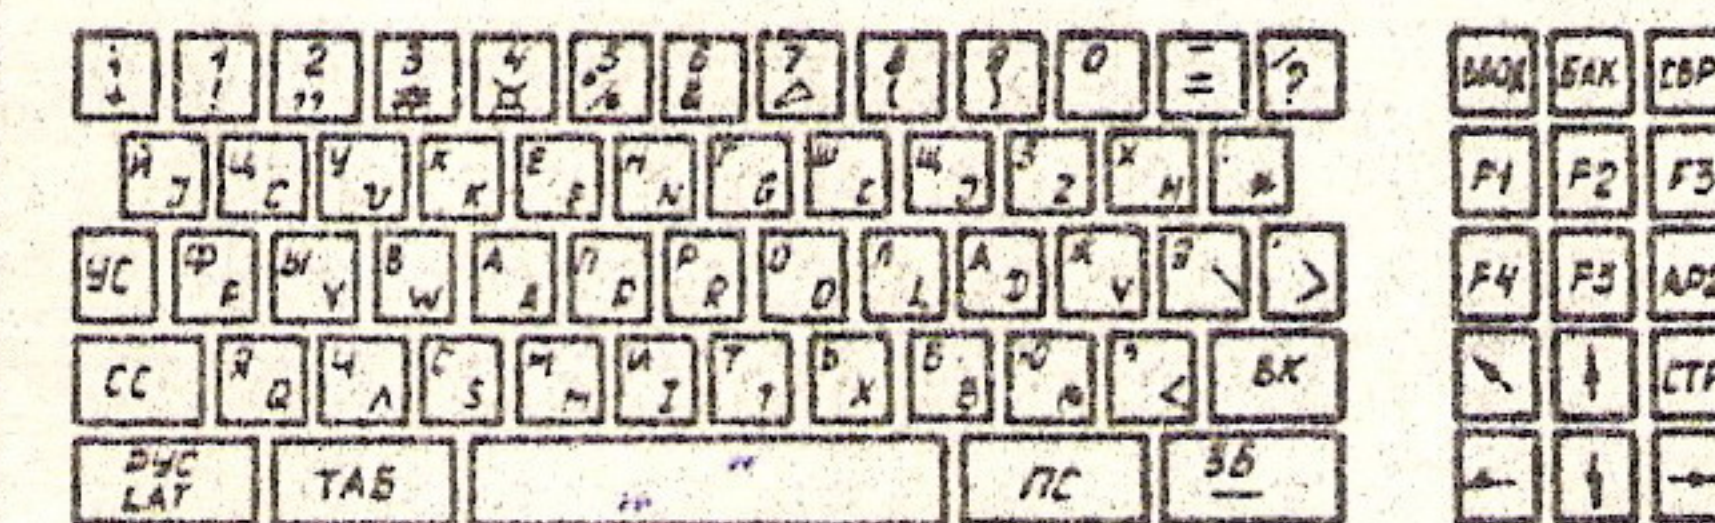

Типы резисторов и конденсаторов

C2-23: R1...R3, R5...R7, R9...R14

C75-188A: R1

C5-37: R4

C2-10: R8

K50-27: C1, C2

K50-24: C14, C20

K10-17: C3, C10, C11, C15, C17, C19

K53-14: C16, C18, C21, C22

K73-17: C6...C9



K4-2: C12

K15-5: C4, C5, C13

Трансформатор импульсный ТВ

Обмотка	Контакты	кол-во витков	сечение провода (мм)
I	1,4	50	0,28
II	11,5	50	0,28
III	5,8	50	0,28
IV	7,14	9	0,75
V	6,13	18	0,28
VI	4,10	24	0,28
VII	2,9	24	0,28
VIII	3,12	5	0,28

Цоколевка транзисторов

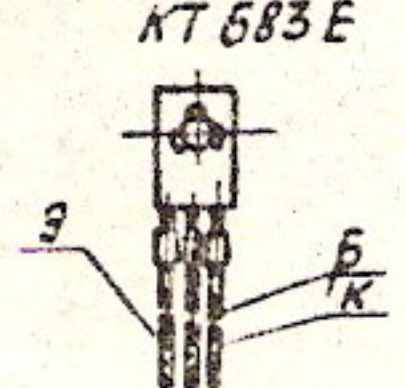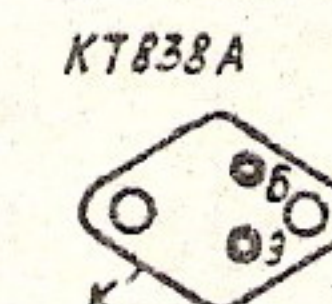

1(2)



Приложение 8

Таблица прошивки ПЗУ К155РЕЗ (D36)

Адрес	ДАННЫЕ								
	Н-код	SET	W	WVR	MX2	MX1	CAS	RAS	RES
00	00	0	0	0	0	0	0	0	0
01	00	0	0	0	0	0	0	0	0
02	00	0	0	0	0	0	0	0	0
03	00	0	0	0	0	0	0	0	0
04	00	0	0	0	0	0	0	0	0
05	00	0	0	0	0	0	0	0	0
06	00	0	0	0	0	0	0	0	0
07	00	0	0	0	0	0	0	0	0
08	99	1	0	0	1	1	1	0	1
09	99	1	0	0	1	1	0	0	1
0A	99	1	0	0	1	1	0	0	1
0B	D9	1	1	0	1	1	0	0	1
0C	D8	1	1	0	1	1	0	1	1
0D	9A	1	0	0	1	1	0	1	0
0E	D8	1	1	0	1	1	0	1	1
0F	D8	1	1	0	1	1	0	1	1
10	05	0	0	0	0	0	1	0	1
11	0D	0	0	0	0	1	1	0	1
12	09	0	0	0	0	1	0	0	1
13	23	0	0	1	0	0	0	1	1
14	07	0	0	0	0	0	1	1	1
15	17	0	0	0	0	0	1	1	1
16	15	0	0	0	1	0	1	1	1
17	1D	0	0	0	1	0	1	0	1
18	9D	1	0	0	1	1	1	0	1
19	07	0	0	0	0	0	1	1	1
1A	07	0	0	0	0	0	1	1	1
1B	07	0	0	0	0	0	1	1	1
1C	07	0	0	0	0	0	1	1	1
1D	07	0	0	0	0	0	1	1	1
1E	07	0	0	0	0	0	1	1	1
1F	07	0	0	0	0	0	1	1	1

Таблица прошивки ПЗУ КР556РТ5 (D9)

Адрес	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00x	3E	83	D3	00	3E	81	D3	04	3E	FF	D3	03	D3	05	D3	06
01x	D3	07	3E	08	32	F6	DE	3E	A8	01	40	00	D3	08	91	D2
02x	1C	00	D8	01	A1	48	CA	48	00	AF	D3	01	02	03	02	03
03x	89	C2	2C	00	83	C3	45	00	3A	F6	DE	3D	C2	38	00	D3
04x	01	E6	10	5F	C9	C2	2C	00	31	F0	DC	11	AA	55	D5	E1
05x	7D	2F	8C	C2	4E	00	11	09	00	60	5A	CD	3E	01	2D	36
06x	FE	19	36	FF	2C	36	81	04	C2	59	00	25	80	16	2D	01
07x	0F	03	AF	D3	04	F8	76	79	D3	02	7A	D3	0C	0D	79	D3
08x	02	7A	D3	0C	0D	E8	05	C2	72	00	CD	9C	00	F8	76	0C
09x	C5	C1	79	E6	08	F6	02	D3	01	C3	8D	00	CD	72	01	57
0Ax	B7	1F	5F	82	67	CD	72	01	8C	DA	9F	00	82	32	F8	DE
0Bx	1E	0C	3E	08	CD	8F	01	FE	55	CA	C1	00	FE	AA	C2	9C
0Cx	00	1D	C2	82	00	CD	9D	01	5F	7E	FE	00	C2	C5	00	21
0Dx	F1	DE	7E	2B	8E	C2	9C	00	57	28	46	CD	9D	01	F5	7E
0Ex	FE	00	CA	18	01	87	87	87	87	4F	F1	23	7E	88	C2	15
0Fx	D8	00	D5	C5	23	11	7E	20	7E	02	0A	AE	77	23	0C	15
10x	C2	F8	00	C1	69	60	CD	3E	01	73	D1	CD	2D	01	CA	D8
11x	00	7A	FE	01	C2	D8	00	C9	F1	93	CA	D8	00	3C	C2	00
12x	00	CD	2D	01	CA	00	00	1D	04	15	C3	D8	00	2E	00	60
13x	CD	3E	01	7E	A7	08	23	FE	81	C2	33	01	A7	C9	D5	7D
14x	07	07	07	8F	07	1F	E6	7D	57	1F	82	85	C6	18	6F	7C
15x	E6	1F	C6	C0	07	D1	C9	D5	FF	D8	01	E6	10	88	CA	59
16x	01	5F	16	01	D8	01	E6	10	14	88	CA	84	01	7A	87	87
17x	D1	C9	E5	D5	CD	57	01	47	87	1F	4F	21	00	00	15	20
18x	CD	57	01	D5	16	00	5F	19	D1	5F	9D	D2	9D	01	78	93
19x	B9	D2	74	01	15	C2	80	01	29	7C	D1	E1	C9	C5	21	30
1Ax	DE	E3	01	23	00	3E	FF	CD	8F	01	77	23	80	47	3E	08
1Bx	0D	C2	A7	01	08	78	96	96	7E	E1	C2	A1	01	C1	C9	C5
1Cx	D5	0E	00	57	CD	3F	00	D8	01	E6	1Q	88	CA	C1	01	07
1Dx	07	07	07	79	17	4F	FF	7A	87	F2	F5	01	79	FE	E5	C2
1Ex	E9	01	AE	32	14	DE	C3	E3	01	FE	19	C2	C7	01	3E	FF
1Fx	32	F4	DE	16	09	15	C2	C7	01	3A	F4	DE	A9	D1	C1	C9

Таблица прошивки ПЗУ К155РЕЗ (D37)

Адрес	ДАННЫЕ								
	Н-код	8	7	6	5	4	3	2	1
00	30	0	0	1	1	0	0	0	0
01	30	0	0	1	1	0	0	0	0
02	30	0	0	1	1	0	0	0	0
03	30	0	0	1	1	0	0	0	0
04	0F	0	0	0	0	1	1	1	1
05	0F	0	0	0	0	1	1	1	1
06	0F	0	0	0	0	1	1	1	1
07	0F	0	0	0	0	1	1	1	1
08	30	0	0	1	1	0	0	0	0
09	30	0	0	1	1	0	0	0	0
0A	30	0	0	1	1	0	0	0	0
0B	30	0	0	1	1	0	0	0	0
0C	3E	0	0	1	1	1	1	1	0
0D	3D	0	0	1	1	1	1	0	1
0E	3B	0	0	1	1	1	0	1	1
0F	37	0	0	1	1	0	1	1	1

Таблица прошивки ПЗУ К155РЕЗ (D37)
(продолжение)

Адрес	ДАННЫЕ								
	Н-код	8	7	6	5	4	3	2	1
10	30	0	0	1	1	0	0	0	0
11	30	0	0	1	1	0	0	0	0
12	30	0	0	1	1	0	0	0	0
13	30	0	0	1	1	0	0	0	0
14	3F	0	0	1	1	1	1	1	1
15	3F	0	0	1	1	1	1	1	1
16	3F	0	0	1	1	1	1	1	1
17	3F	0	0	1	1	1	1	1	1
18	30	0	0	1	1	0	0	0	0
19	30	0	0	1	1	0	0	0	0
1A	30	0	0	1	1	0	0	0	0
1B	30	0	0	1	1	0	0	0	0
1C	3F	0	0	1	1	1	1	1	1
1D	3F	0	0	1	1	1	1	1	1
1E	3F	0	0	1	1	1	1	1	1
1F	3F	0	0	1	1	1	1	1	1

